
CRUISE CONTROL MAIN SWITCH ASSY REPLACEMENT

OODENI OA


HINT:

Installation is in the reverse order of removal.

- 1. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)
- 2. REMOVE STEERING WHEEL COVER LOWER NO.2
- 3. REMOVE STEERING WHEEL COVER LOWER NO.3
- 4. REMOVE HORN BUTTON ASSY (SEE PAGE 60-25)

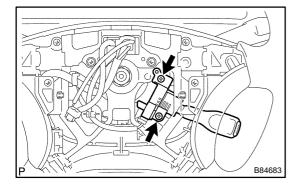

- 5. REMOVE CRUISE CONTROL MAIN SWITCH ASSY
- (a) Disconnect the connector.
- (b) Remove the 2 screws.

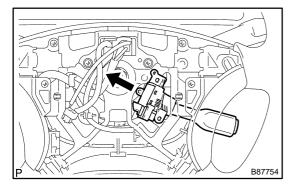

(c) Pull out the cruise control main switch assy in the direction shown by the arrow in the illustration.

- 6. INSTALL HORN BUTTON ASSY (SEE PAGE 60-25)
- 7. INSPECT HORN BUTTON ASSY (SEE PAGE 60-17)
- 8. CONNECT BATTERY NEGATIVE TERMINAL
- 9. INSPECT SRS WARNING LIGHT (SEE PAGE 05-1456)