
FRONT DOOR BELT MOULDING ASSY LH REPLACEMENT

760CI-0

HINT:

- Installation is in the reverse order of removal. But the installation is indicated only when it has a point.
- In the RH side, work in the same procedure as in the LH side.
- 1. REMOVE POWER WINDOW REGULATOR SWITCH ASSY (See page 75-8)
- 2. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page 75-8)
- 3. REMOVE FRONT DOOR INSIDE HANDLE BEZEL PLUG LH (See page 75-8)
- 4. REMOVE FRONT DOOR TRIM BOARD SUB-ASSY LH (See page 75-8)
- 5. REMOVE OUTER REAR VIEW MIRROR ASSY LH (See page 75-8)

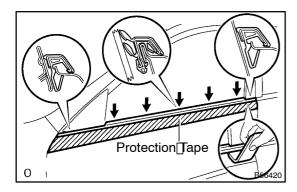

6. REMOVE FRONT DOOR BELT MOULDING ASSY LH

- (a) Put protective tape under the front door belt moulding.
- (b) Using a moulding remover or scraper, remove the front door belt moulding.

HINT:

Tape the scraper tip before use.