
## REAR DOOR BELT MOULDING ASSY LH REPLACEMENT

760CB-04

## HINT:

- The installation procedures are the removal procedures in reverse order.
- Use the same procedures for the RH side and LH side.
- 1. REMOVE POWER WINDOW REGULATOR SWITCH ASSY (See page 75–16)
- 2. REMOVE REAR DOOR INSIDE HANDLE BEZEL PLUG LH (See page 75-16)
- 3. REMOVE REAR DOOR TRIM BOARD SUB-ASSY LH (See page 75-16)

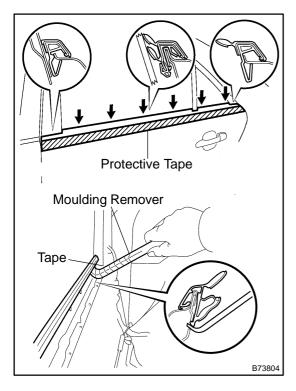

## 4. REMOVE REAR DOOR BELT MOULDING ASSY LH

- (a) Put protective tape under the moulding.
- (b) Using a moulding remover, pry out the moulding as shown in the illustration.

## HINT:

Tape the remover tip before use.