
FRONT FENDER FRONT APRON (ASSY)


REPLACEMENT

- 1. REMOVE RADIATOR UPPER SUPPORT (See page BP-1)
- 2. REMOVE FRONT FENDER FRONT APRON
- (a) Replace the front fender apron front extension and fender apron plate at the same time.

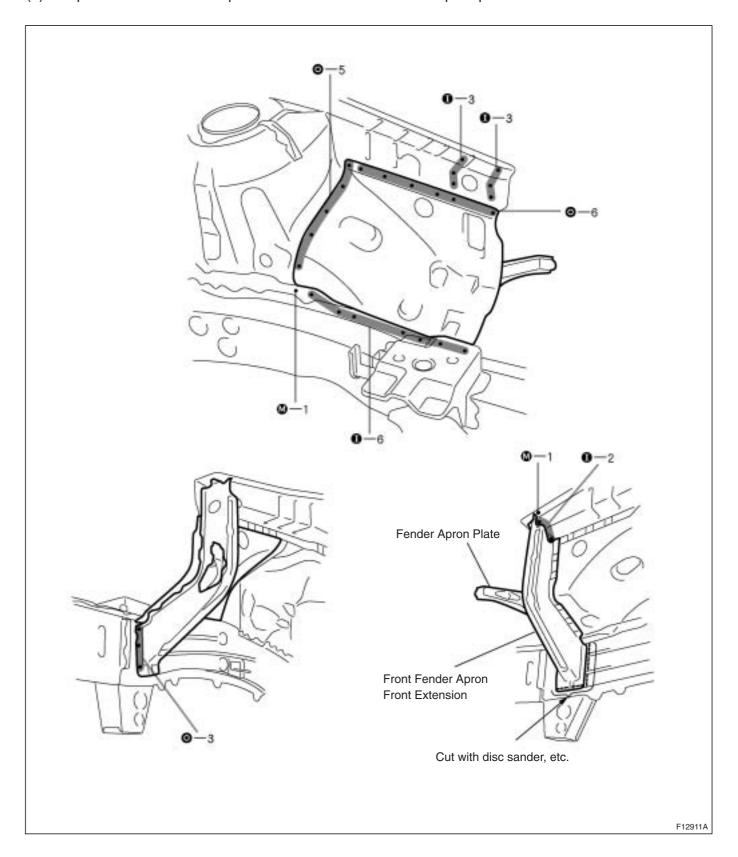

3. INSTALL FRONT FENDER FRONT APRON

(a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

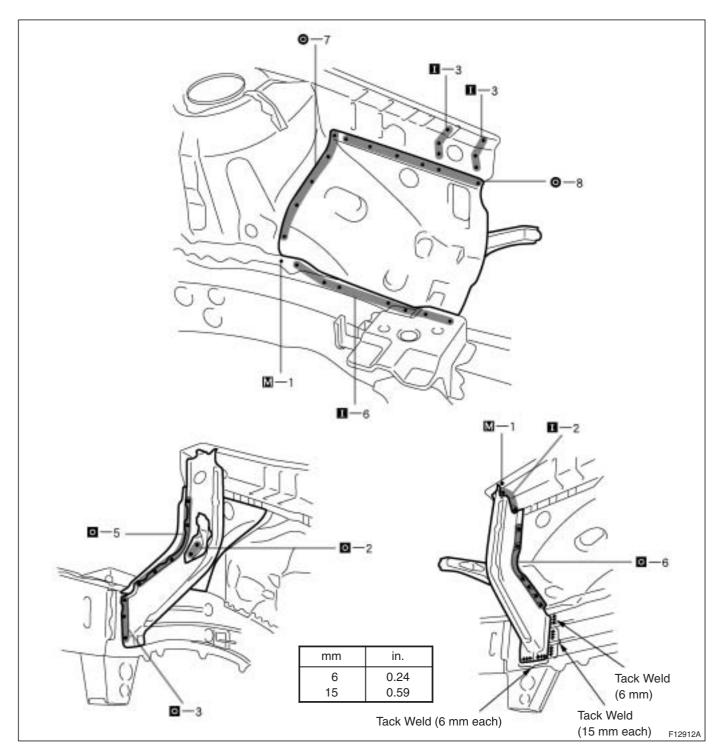

- 4. MEASURING THE ENGINE COMPARTMENT DIMENSIONS (See page BP-100)
- 5. INSTALL RADIATOR UPPER SUPPORT (See page BP-1)
- 6. APPLYING SEALER TO THE ENGINE COMPARTMENT (See page PC-1)
- 7. APPLYING UNDERCOATING (See page PC-6)
- 8. APPLYING ANTI-RUST AGENT
- (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.