


CIGARETTE LIGHTER ASSY REPLACEMENT

6709K-01

HINT:

COMPONENTS: [See page 67-1](#)

1. REMOVE INSTRUMENT PANEL ASH RECEPTACLE ASSY ([See page 71-10](#))

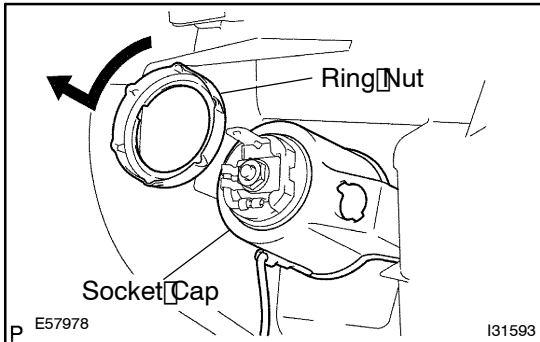

2. REMOVE CIGARETTE LIGHTER ASSY

- (a) Turn the ring nut counterclockwise to remove it.
- (b) Remove the cigarette lighter assy from the instrument panel ash receptacle assy.

3. INSTALL CIGARETTE LIGHTER ASSY

- (a) Properly position the socket at the cutout of the instrument panel ash receptacle assy and insert them.
- (b) Install the socket cap.
- (c) Turn the ring nut clockwise from the backside.